


Installing the Connect-Indigo adapter Instructions

Step 1

Separate the adapter into 3 pieces:
Part A, **Part B** and the **Secure-Connect**

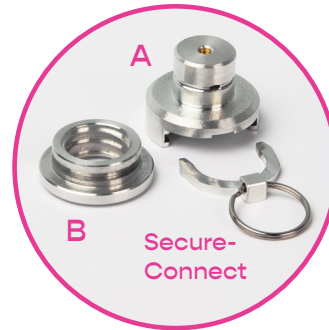

Step 2

Lift the lever of the carbonator to insert **Part A** of the adapter into the device. Push in until it locks.



Step 3

Screw **Part B** firmly onto the CO₂ cylinder.



Step 4

Insert the cylinder into the carbonation device, making sure that the **cylinder rupture disc** is facing you. Lower the lever of the carbonation device.



Step 5

Insert the **Secure-Connect** into the holes provided for this purpose. This part is positioned over **parts A** and **B** to secure them.

To uninstall the adapter

Pull on the pin of the **Secure-Connect** while holding **Parts A** and **B** in place. Then remove the CO₂ cylinder from the appliance and unscrew **Part B**.



Need help?

Simply contact the Indigo Soda team for help with installing the Indigo-Connect adapter on your next-generation device. We will provide the support and resources you need. Just email info@indigosoda.ca.

Give us your opinion

We want to learn more about your experience! Send your feedback to info@indigosoda.ca.